

歡迎來到 Logitech 客戶支援

告訴我們您的疑問...



✓ 註冊

快速入門

? 常見問答集

💬 社群

↓ 下載

🔧 保固

⚙️ 規格

🔧 備用零件

📁 圖庫

✉️ 與我們聯絡

Getting Started - MX Anywhere 2S

沒有適用於此產品的常見問答集

GETTING STARTED

Questions about your MX Anywhere 2S? We've got the answers, videos, downloads and information you need. Search for articles or select a topic below to get started.

Step One

⬇️Download Logitech Options to use all the possibilities this mouse has to offer. To learn more about the possibilities go to logitech.com/options.

嗨，您好啊！我可以為您提供什麼協助？

Step Two

logitech 支援

THIS mouse allows you to use it with up to three different computers. Just use the Easy-Switch™ button to change the channel. Select the channel you want and go to the next step.

Step Four

To connect your mouse to your computer press the Easy-Switch™ button for 3 seconds. When it blinks fast it means it's in discoverable mode.

Step Five

Choose if you want to pair with [Bluetooth](#) or with the provided [Unifying](#) receiver.

Product Overview

MX ANYWHERE 2S AT A GLANCE



- 1 – Scroll wheel
- 2 – Middle button
- 3 – Battery status LED
- 4 – Micro USB port
- 5 – On/Off button
- 6 – Darkfield high precision sensor
- 7 – Connect and Easy-Switch button
- 8 – Back/forward buttons

Features:

Hyperfast scrolling

Press down on the wheel to switch between two scrolling modes: hyperfast and click-to-click.



嗨，您好啊！我可以為您提供什麼協助？

logitech 支援



In hyperfast mode you'll fly through documents and web pages with a single spin. Click-to-click scrolling ratchets the wheel, giving you the precision you need for navigating lists, slides, and images.

Logitech Options

Install Logitech Options to optimize the scrolling experience.

- Enable smooth scrolling
- Switch scrolling direction
- Adjust scrolling speed (Mac only)

Horizontal scrolling

Scroll wide documents and web pages by tilting the wheel right or left.



Use Logitech Options software to:

- Adjust scrolling speed
- Invert horizontal scrolling direction
- Assign another action to the tilt wheel

Back/forward button

Conveniently located back and forward buttons enhance navigation and simplify tasks.



嗨，您好啊！我可以為您提供什麼協助？^X

to the buttons.

NOTE: On a Windows computer, this feature is available right out of the box.

Gestures


Installation of Logitech Options transforms the middle button into a gesture button you can use to trigger gestures that simplify desktop and application management, media control, document viewing, and personalization of common tasks.

Perform a gesture:

- Hold down the middle button while moving the mouse left, right, up, or down.

The figure below shows gesture sets available for managing windows in Windows (7, 8, or later) and Mac OS X (10.8 or later).

TIP: Use Logitech Options to view available gesture sets and assign gestures to the middle button or to other mouse controls.

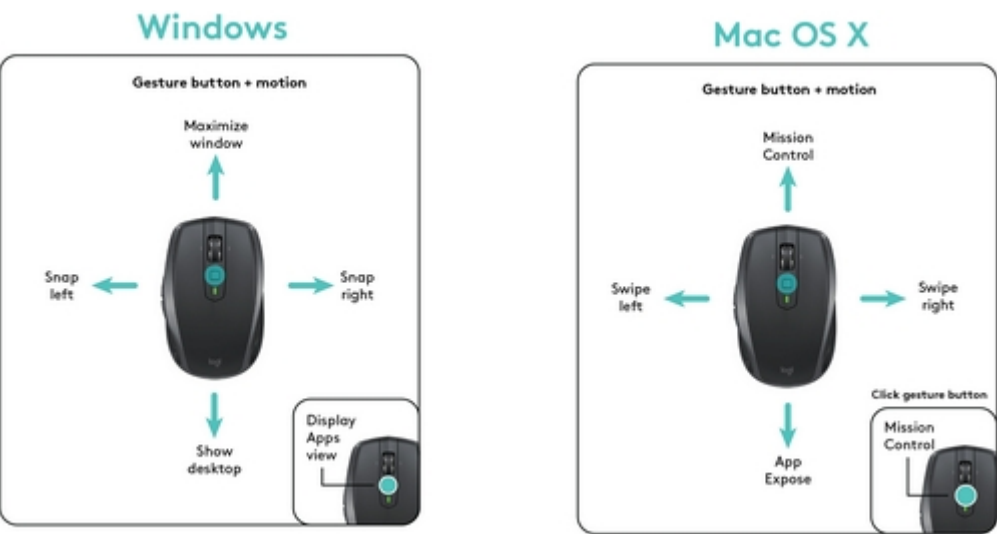

Battery

Check battery level:

- The LED on top of the mouse turns red to indicate that battery power is low and it's time to change batteries.

After glowing green for 5 seconds when the mouse is powered on or waking from sleep, the LED indicates battery status.

Color	Status
Green	20-100% charge
Red	Less than 20% charge Recharge now!

TIP: Install Logitech Options to set up and receive battery status notifications.

To recharge MX Anywhere 2S:

- Connect one end of the provided charging cable to the Micro-USB port on the mouse and the other end

嗨，您好啊！我可以為您提供什麼協助？

X

cable.)

One minute of charging gives you enough power for two hours of use. Depending on how you use the mouse, a full charge can last up to 70 days.*

* Based on eight hours of daily use. Battery life may vary depending on user and operating condition.

[返回頂端](#) 

仍需要協助？

想要詢問其他擁有相同產品的使用者問題？加入會談。

支援社群

LOGITECH 支援部門

商務支援首頁

支援首頁

下載與應用程式

備用零件

MyHarmony 支援

Ultimate Ears 支援

社群論壇

合規證明

保固資訊

隱私權與安全性

與我們聯絡

